

# TMAS PC Manager Quick User Guide

## How To Receive Alert Message From TMN-50T?

- Step 1: Please download PC Manager software
- PC Manager download url: <https://bit.ly/2RIkhd6>
- Or use QR code to download PC manager software:



## Step 2: Login TMAS PC Manager

- Click on Login button
- Key in the default user name & password as below:  
User name: Admin  
Password : Admin
- Login window as shown in Figure 1.



Figure 1: Login Page

## Step 3: Add Authorized Users to Receive Alert Message

- Click on User Manager button and select Add button on User Manager window as shown in Figure 2.
- After, key in the User Name & Mobile No as shown in Figure 3. 4.  
Example:  
User Name: Nick  
Mobile No : 8523 3863
- Set status to active and click on the Save button.

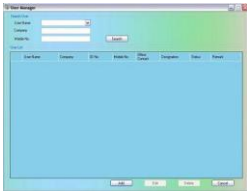


Figure 2: User Manager



Figure 3: Add New User

- Click on the Add button on the section of Authorized Users Select.
- Tick the authorized user Nick on the Authorized Users Select window as shown in Figure 7.
- After, click on the OK button.

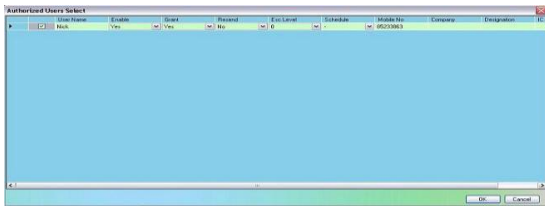


Figure 7: Authorized Users Select

- Under Device IO tab, enable the input setting at input channel 0 as shown in Figure 8, for example:
  - Enable Channel: Tick to Enable
  - Default/UDM: Select UDM
  - Norm Open/ Norm Close: Select Norm Open
  - Channel Name: Power Supply
  - User Define Message (UDM): Power Supply Is Failure
  - Tick the Nick at User List
- After, click on the Save button.

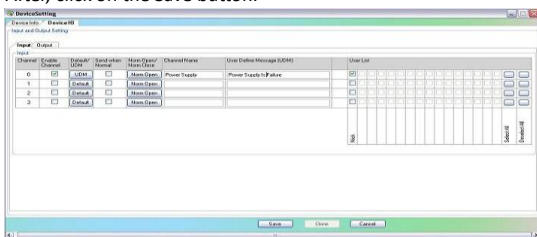


Figure 8: Input Setting

## Step 4: Add a New Device

- For this guided, TMN-50T is used as an example.
- Click on Add Device button on Device Manager window shown in Figure 4.
- Select the device TMN-50T in Device Selection window shown in Figure 5.

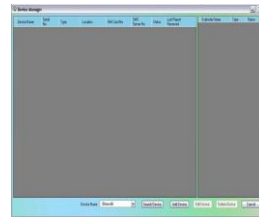


Figure 4: Device Manager

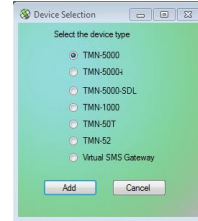


Figure 5: Device Selection

- After, click on Add button.
- The Device Info Setting window will appear as shown in Figure 6.
- Under the Device Info tab, please key in the following details at \*Compulsory field, for example:
  - Device Serial No -> 26532223
  - Device Name -> BLK 688F
  - Country Code -> 65
  - Device SIM Card No -> 9999 8888
  - Data Center -> SMS Server 1
- \*Country code 65 for Singapore

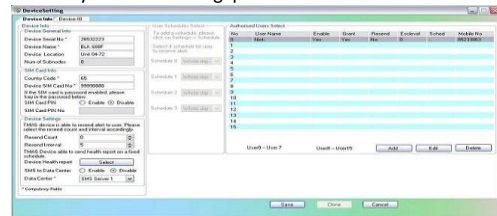


Figure 6: Device Info Setting

## Step 5: Direct Wire Configuration

- Make sure the TMN-50T is connected to the PC and is powered on.
- After, click on the Direct Wire Configuration button and select the comport and device type that the TMAS device is connected to.
- Finally, click Configure button to begin.
- Configuration Status will display the status of the configuration as shown in Figure 9.



Figure 9: Direct Wire Configuration

## Step 6: To Deploy TMN-50T

- Once the TMN-50T is being programmed via PC Manager software, it can be immediately deployed at remote site to monitor and control the desired equipment.
- When any input triggering via dry contact, TMN-50T will send out the message in Default or User Define Message to mobile users.
- For this guided, when Input Channel 0 is triggered, User Define Message-> 'Power Supply Is Failure' will send out from device TMN-50T to user Nick.